


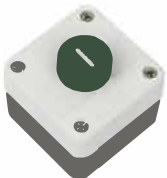

Button switch box

	Type	Configuration	Mark
	LAY5-B101H29	Green flat button, 1NO	Sign mark: START
	LAY5-B102	Green flat button, 1NO	Switch mark: I
	LAY5-B103	Green flat button, 1NO	Switch mark: START
	LAY5-B111H29	Red flat button, 1NC	Sign mark: STOP
	LAY5-B112	Red flat button, 1NC	Switch mark: O
	LAY5-J174	Red Φ 40 mushroom auto-locking, turn	
	LAY5-B211H29	Green flat button, 1NO; Red flat button, 1NO	Sign mark: START, STOP
	LAY5-B213	Green flat button, 1NO; Red flat button, 1NO	Switch mark: I O
	LAY5-B215	Green flat button, 1NO; Red flat button, 1NO	Switch mark: START, STOP
	LAY5-B222	White flat button, 1NO; Black flat button, 1NO	Sign mark: ↑ ↓
	LAY5-B341H29	Green flat button, 1NO; Red flat button, 1NC; Green flat button, 1NO	Switch mark: FORWRD, STOR, REVERSE
	LAY5-B339	Green flat button, 1NO; Red flat button, 1NC; Green flat button, 1NO	Switch mark: OPEN, STOP, CLOSE
	LAY5-B324	Green flat button, 1NO; Red flat button, 1NC; Black flat button, 1NO	Switch mark: I O II
	LAY5-B334	White flat button, 1NO; Red flat button, 1NC; Black flat button, 1NO	Switch mark: ↑ O ↓
	LAY5-B311H29	White flat button, 1NO; Red flat button, 1NC; Black flat button, 1NO	Switch mark: → O ←