


## Distribution Apparatus

### YCS1 Automatic Transfer Switch




#### GA Type Automatic Transfer Switch

Installation dimensions(16~1600A)

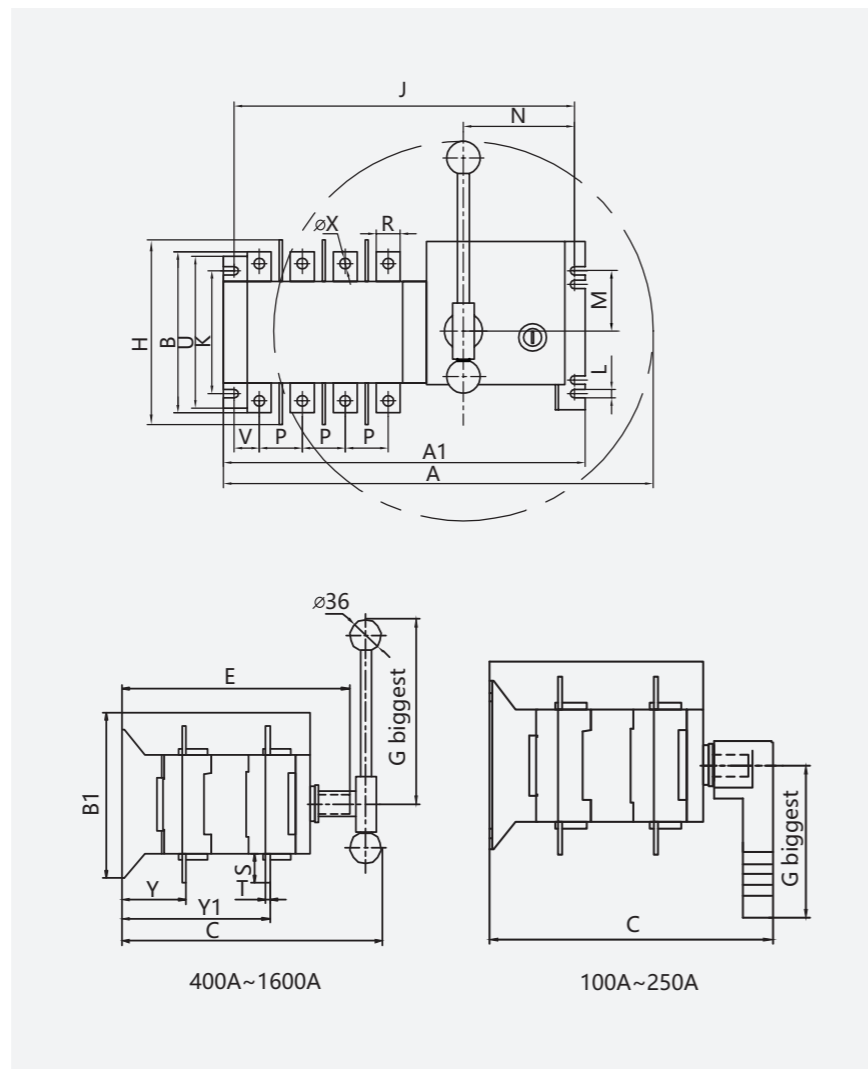

1000A~1600A Installation map

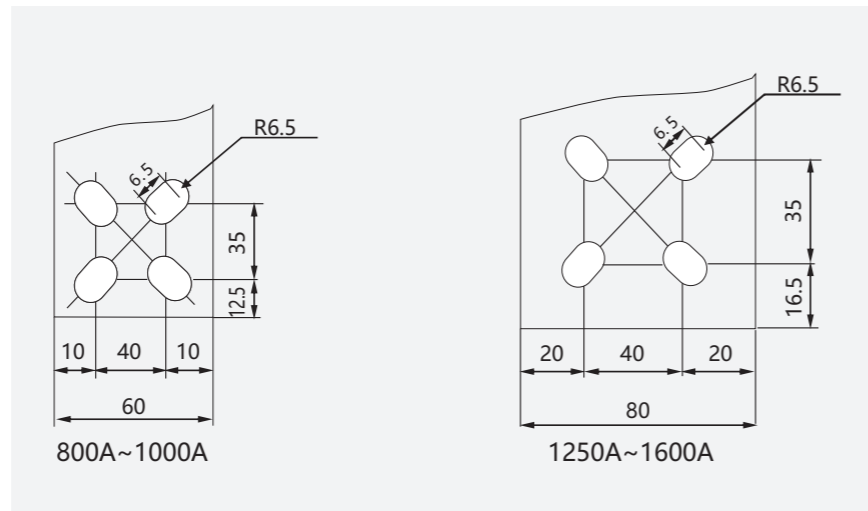


## Distribution Apparatus

### YCS1 Automatic Transfer Switch

16A~1600A Installation Dimensions ( 2 input 2 output)

Specification	Total size								Switch installation										Connection terminal			
	A	A1	B	B1	C	E	G	H	J	K	L	M	N	P	R	S	T	U	V	ΦX	Y	Y1
16~100A	270	245	106	103	170	142	115	146	226	84	7	44	81	30	14	18	2.5	103	12	6	40.5	92
125~160A	348	305	135	142	224	190	144	185	284	102	7	49	91	36	20	25	3.5	127.5	19	9	56	127.5
250A	411	368	159	142	224	190	144	200	352	102	7	49	91	50	25	29	3.5	141.5	28	11	56	130
400A/3P	525	374	234	222	305	268	250	290	354	179	9	96	91	65	32	37	5	222	38	11	83	193
400A/4P	525	434	234	222	305	268	250	290	414	179	9	96	91	65	32	37	5	222	38	11	83	193
630A/3P	525	374	250	222	305	268	250	290	354	179	9	96	91	65	40	45	6	222	38	12	83.5	193.5
630A/4P	585	434	250	222	305	268	250	290	414	179	9	96	91	65	40	45	6	222	38	12	83.5	193.5
800~1000A/3P	785	520	328	250	390	326	360	/	496	220	11	115	84	120	60	64	8	250	56.5	13	109	254
800~1000A/4P	1080	635	328	250	390	326	540	/	610	220	11	115	84	120	60	64	8	250	60.5	13	109	254
1250A/3P	785	520	336	250	390	326	360	/	496	220	11	115	84	120	80	68	8	250	56.5	13	109	254
1250A/4P	1080	635	336	250	390	326	540	/	610	220	11	115	84	120	80	68	8	250	60.5	13	109	254
1600A/3P	785	520	336	250	390	326	360	/	496	220	11	115	84	120	80	68	10	250	56.5	13	110	255
1600A/4P	1080	635	336	250	390	326	540	/	610	220	11	115	84	120	80	68	10	250	60.5	13	110	255

2000A~3200A 2 input 1 output Installation diagram

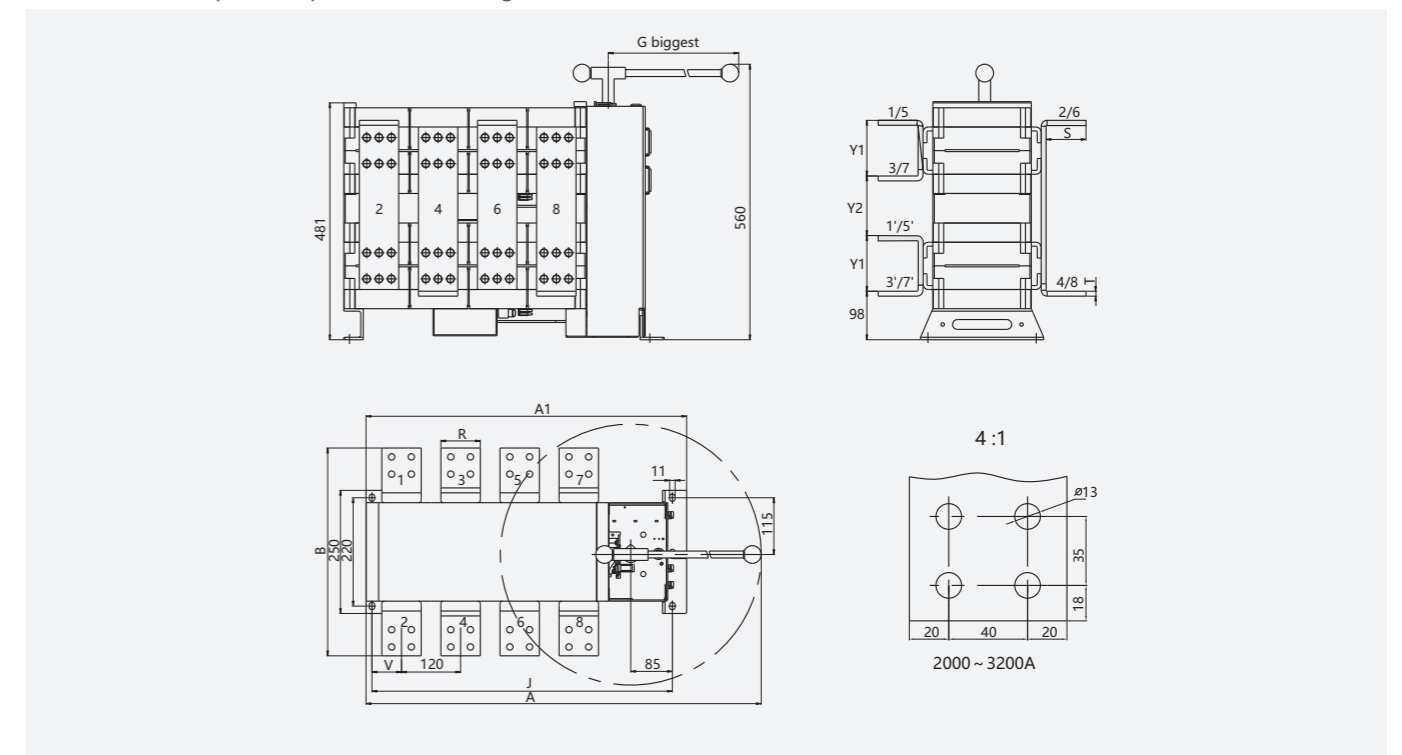

2000A~3200A Installation dimensions

Specification	A	A1	B	B1	C	E	G	H	J	K	L	N	O	P
2000A	800	633	422	542	447	524	610	80	81	10	30	116	118	116
2500A	800	633	432	542	447	524	610	80	81	15	30	121	113	121
3200A	800	633	442	542	447	524	610	80	81	20	30	126	108	126